
NEEWER[®]

Dear users, the configuration for this camera is professional, so please read the user manual carefully before using the camera.

IP Camera

User manual

2015-05 V2.0

Statement

If the user manual can not help you to solve the problem, please call our technology center for solutions. We will update the content for the new functions without notice.

Notice

1、Installation Environment

- ☞ Keep away from high-temperature, heat source and direct sunlight;
- ☞ Keep away from water and when get wet, cut off the power immediately.
- ☞ Avoid using in damp environment; the reference range for operation humidity is under 85%RH.
- ☞ Avoid using in overheating or too cold environment, the reference range for operation temperature is $-10^{\circ}\text{C} \sim +50^{\circ}\text{C}$
- ☞ Please install it horizontally or wall mounting, avoid strenuous vibration place and do not put other equipments onto the item

2、Transport and Handling

- ☞ The package is well-designed to ensure the security during the delivery, so please do not change the package at random.
- ☞ Do not move the ip cameras from overheated to super-cooled condition frequently, otherwise it will frost and shorten the service life.
- ☞ Do not move the item when power on, otherwise the main board might be damaged.



Notice:

1. Please check the power supply before it works.
2. Be careful not to bang the camera or subject it to strong impacts or shocks.
3. Do not touch the optical components for the image sensor directly, if necessary, please place a clean and moistened cloth with alcohol and wipe the dirt gently; When not in use, please place the dust cover on the item to protect the image sensor.
4. Do not aim the camera directly at the sun or at other intense light sources that could affect the image quality (it is not the problem of ip camera), and also shorten the service life for the image sensor.
5. Keep away from laser when it is working, otherwise the image sensor can be damaged.
6. If the equipment does not work properly, please contact the store or the service center, do not disassemble or modify the equipment in any way. (Problems caused by unauthorized modification or repair should be at your own risk.)

Index

1 PRODUCT INTRODUCTION	3
1.1 PRODUCT SUMMARY	3
1.2 PACKAGE FOR TYPICAL PRODUCTION	
2 INSTALLATION GUIDE	3
2.1 WIRED CONNECTION TO LAN	3
2.2 WIFI CONNECTING TO LAN	4
2.3 CONNECTING TO WAN	5
3 OPERATION OF IE BROWSER	7
3.1 VIEW VIDEO	7
3.2 DEVICE INFORMATION	8
3.2.1 Device status	8
3.2.2 Device alias setting	8
3.2.3 Device date and time setting	8
3.2.4 Local recording path	9
3.3 DEVICE WEB SETTING	9
3.3.1 Basic network settings	9
3.3.2 Wireless wifi settings	9
3.3.3 Manufacture's DDNS setting	10
3.3.4 Third party DDNS setting	10
3.3.5 UPnP settings	10
3.4 ALARM SETTINGS	10
3.4.1 Alarm service setting	10
3.4.2 Mail Service Setting	11
3.4.3 FTP Service Setting	12
3.4.4 Alarm log	12
3.5 USER AND DEVICE SETTING	13
3.5.1 Multi-device Setting	13
3.5.2 User Settings	13
3.5.3 PTZ settings	13
3.5.4 Maintain	14
4 VISITING DEVICE BY OTHER SOFTWARE	14
4.1 OTHER WEB BROWSER	14
4.2 MOBILE PHONE SOFTWARE	14
5 PRODUCT FAMILY FOR L SERIES	14
5.1 VGA PTZ CAMERA P100	14

1 Product introduction

1.1 Product summary

Thank you for choosing our company's L-S series IP camera, the IP Camera combines a high quality digital video camera with network connectivity and a powerful web server to bring clear video to your desktop from anywhere on your local network or over the Internet. It is very suitable for family, shops, office building and so on.

Main features for L series:

- ◆ The video is compressed by MJPEG. There are VGA/QVGA/QQVGA three optional video resolutions. User can changes some parameters according to their demands to satisfy his own visual preference;
- ◆ Infrared LED for night vision covers an area of 5m, to achieve 24-hours monitoring;
- ◆ Support 802.11b/g/n protocol, can build up wireless monitoring;
- ◆ Support motion detection, send alarm information by email and FTP;
- ◆ Support view on mobile phone;
- ◆ Built-in web server, all data is transferred through one port; it is easy for user to do the network setting;
- ◆ Manufacture attached a label at the bottom of each IP Camera, it include DDNS. When IP Camera is connected to the internet, this URL can be used to visit the device;
- ◆ Manufacturer provides free software, support Multi-view, long time recording, video playback etc;

2 Installation guide

2.1 Wired connection to LAN

- ✚ Power on the IP camera, connect IP camera to router by network cable, meanwhile, connect computer to the same router, example of figure 1.

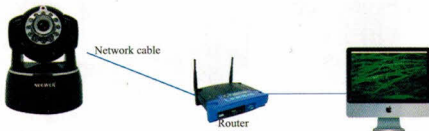


Figure 1

- Insert CD to computer driver, double click "LSearch_en.exe" in the CD, run the software, click "Search", select the searched device, click "Browse" to open browser, it will pop up user login dialog, enter default user name(admin) and password(123456) to login the camera as figure 2.

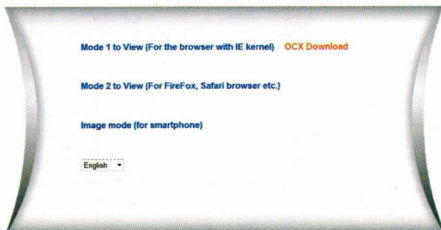


Figure 2

We suggest using IE kernel browser to view the video (it can provide more functions), but user needs to install video player before viewing the video. Click "OCX Download" to download OCX and install it.

Notice:

- ♦ If you installed the firewall software in your PC, when you run the LSearch_en.exe, it may pop up a window to say "whether you want to block this program or not", then you should choose not to block.
- ♦ You can hold on reset button on the camera for 10 seconds to restore factory default if you forget user name and password, during the process, don't disconnect the power, otherwise the camera maybe damaged.

2.2 WIFI connecting to LAN

You can connect the camera with router by wireless connection, as figure 3.



Figure 3

Before connecting router by wifi, please connect them as chapter 2.1 to Login camera and enter wifi setting, and then operate as the following step, example of figure 4.

Wireless Lan Settings				
	ID	SSID	MAC	
Wireless Network List	1	Sste	00:20:f2:24:7e:c4	
	2	CAM6602	00:23:02:03:66:02	
	3	object	6c:e8:73:ad:05:8b	
	4	abct	e0:05:c5:ca:19:36	
	5	song001	38:83:45:c2:a4:ba	
	6	yfb-test2	b0:48:7a:59:d0:c2	
	7	QC-YYY	00:1e:58:f3:78:57	
	8	owen	ec:38:3f:56:95:66	
	9	CAM	00:0a:eb:56:fe:70	
	10	ABC	5c:63:bf:7a:9c:86	
	11	LIFE	f4:ec:38:32:15:78	
	12	GCB-say	74:ea:3a:28:33:62	
<input type="button" value="Scan"/>				
Using Wireless Lan	<input checked="" type="checkbox"/>			
SSID	owen			
Wi-Fi Channel	<input type="text"/>			
Network Type	Infra			
Authentication	WPA2-PSK Personal (TKIP)			
Share Key	<input type="text"/>			
<input type="button" value="Submit"/> <input type="button" value="Refresh"/>				

Figure 4

Enter the Wireless LAN Setting, click the "Scan" button, it will show you all the wireless networks detected in the Wireless Network List column. Select one of them and tick "Using Wireless Lan", then the relevant data of the selected wireless network will be shown in the following blanks. Input the password and click "Submit", then the WIFI setting is finished. Unplug the cable, then you can connect to router by wifi.

Notice: When the device is connected both WIFI and wired, it will firstly connect to the wired network. If the camera enables DHCP to obtain IP address automatically, so the IP address is not same in wired connection and wifi connection, recommend to set fixed IP address for the camera.

2.3 Connecting to WAN

You should connect the LAN network to WAN first and do the port forwarding, connect as figure 5.

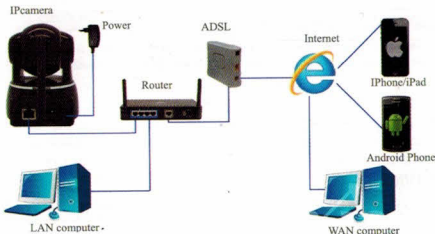


Figure 5

If visit IP Camera from WAN, you **must** do port forwarding on the router. Example of figure 6.

NETGEAR SMARTWIZARD router Wizard

Basic Settings

Does Your Internet Connect?

☒ Yes

☐ No

Internet Service Provider

Choose port

Please select the service type

☒ Port Forwarding

☐ Port Triggering

Service Name: Age-of-Empire Server IP Address: 192.168.1.1

Service Name: Start Port: End Port: Server IP Address

Edit Service Delete Service

2 Add Custom Service

Ports - Custom Services

Service Name: Input IP camera port #

Service Type: TCP/UDP

Starting Port: 1025 (1-65534)

Ending Port: 1025 (1-65534)

Server IP Address: 192.168.1.1

Apply Cancel

Ports - Custom Services

Service Name: Input IP camera IP address

Service Type: TCP/UDP

Starting Port: 1025 (1-65534)

Ending Port: 1025 (1-65534)

Server IP Address: 192.168.1.178

Apply Cancel

Figure 6

Operation Steps:

- 1) After login the interface of the router, choose "Port Forwarding";
- 2) Choose "Add custom Service";
- 3) Input IP camera http port;
- 4) Input IP address of IP camera, click "Apply".

After finishing the port forwarding, you can use WAN IP address of router and http port of camera to visit the camera by remote computer as figure 5.

Notice: Because of the differences of the routers, the interface and setting method of router are also different. About how to do the port forwarding for various routers, please refer to the user manual of your router or consult with router manufacturer.

3 Operation of IE browser




3.1 View video

After installing the plug-ins, click "Mode 1 to view" as Figure 2 to view the video (video as Figure 7).



Figure 7

1) Audio, Talk, Record, Snapshot

You can click     these buttons to perform audio, talk, record and snapshot functions.

Note: about recording path, click  button to enter setting interface, you can set it in "Local Recording Path", as figure 8.




Figure 8


2) Multipicture change button

If you add multi-devices in chapter 3.5.1 "multi-device setting", it will connect other device to display pictures automatically and change into 4, 9 split screen. In playing video area, you can select a picture to control audio, talk, record, snapshot and PTZ control etc.


3) Viewing control area

When viewing video, you can control PTZ moving, picture reversal and mirror etc., and can adjust picture parameters, includes resolution, brightness etc.

The camera supports 16 preset points, you can set one place as preset point when moving the PTZ to a place, also can call the preset point when the camera move to another place, so the camera can return to the set place.

Note:  button can control work mode of IR LED. IR LED may have auto, forced close two mode, the IR LED will power on or off according to environment light in auto mode; the IR LED always power off in forced close mode.

4) Setting device parameters

Click  button to enter setting interface, you can set all parameters of the camera described in chapter 3.2 to 3.5. Only administrator can login to set these parameters.

3.2 Device information

3.2.1 Device status

The user can obtain "Device firmware version", "Web UI version", "Alias", "AP MAC" etc.

3.2.2 Device alias setting

The user can name the camera, example for home, office etc.

3.2.3 Device date and time setting

It can achieve "Sync with NTP Server" when the device was connected to WAN, but you need to select correct time zone where the camera is located, or select "Sync with PC time".

Device date&Time Settings	
Device Clock Time	Thursday, January 17, 2013 02:17:02
Device Clock Timezone	(GMT +08:00) Beijing, Singapore, Taipei
Sync with NTP Server	<input checked="" type="checkbox"/>
Ntp Server	time.nist.gov
	<input type="checkbox"/> Sync with PC Time

Submit

Refresh

Figure 9

Remark: Please carefully check the camera time, so it can ensure the alarm accuracy.

3.2.4 Local recording path

The camera will create a file folder named "Record files" automatically when the user don't set "local recording path" or launch recording directly, and then save recording file to the folder, as figure 10.

Local Recording Path	
Local Recording Path	C:\ <input style="float: right;" type="button" value="select..."/>
Record Time Length(Minute)	5 <small>Least 5 Minutes , MAX 10 Minutes</small>
Reserved Disk Space(MB)	200 <small>Least 200MB</small>
Cover Previous Recording	<input type="checkbox"/>

Setup

Refresh

Figure 10

3.3 Device web setting

3.3.1 Basic network settings

The user can also enter the Basic Network Settings to set the IP address instead of using the search software "LSearch_en.exe". See below Figure 11.

Basic Network Settings	
Obtain IP from DHCP Server	<input type="checkbox"/>
IP Addr	192.168.0.111
Subnet Mask	255.255.255.0
Gateway	192.168.0.1
DDNS Server1	8.8.8.8
DDNS Server2	202.96.128.166
Http Port	80

Setup

Refresh

Figure 11

Remark: The router connected to camera need to enable DHCP when the user uses "obtain IP from DHCP server"; the routers enable DHCP by default.

3.3.2 Wireless wifi settings

Please refer to chapter 2.2.

3.3.3 Manufacture's DDNS setting

Manufacturer puts a label of DDNS at the bottom of each IP Camera, it is unique, the manufacturer has established a DDNS system, and allotted a DDNS to every device, the user only enter the website into browser, and then view it from remote PC, example of figure 12.

Manufacture's DDNS	
Manufacture's Domain	0020lth.newer.com

Figure 12

3.3.4 Third party DDNS setting

User can also use third party DDNS, such as www.dyndns.com. User must apply a free domain name from this website and fill the info into the below blanks (Figure 13) and save the settings. Then the domain name can be used.

Third Party DDNS Settings	
Third Party DDNS Service	DynDns.org(dyndns) ▼
DDNS User	btest
DDNS Password	*****
DDNS Host	btest.dyndns.biz
DDNS Status	Errors in Network Communication

Figure 13

Notice: Using the third party domain name, if the http port is not 80, the port number should be adding to the domain name with colon. Example: <http://btest.dyndns.biz:81>. Don't enter port number when you use manufacturer's DDNS.

3.3.5 UPnP settings

If you are in the UPnP mode, once the IP camera is connected into the LAN, it will communicate with the router in the LAN and do the port-forwarding with open port of router automatically. In figure 14, just tick "Using UPnP to Port Mapping" to finish the setting.

UPnP Settings	
Using UPnP to Port Mapping	<input checked="" type="checkbox"/>

Figure 14

Before using the UPnP function, please make sure the router's UPnP function has been enabled. Not all the routers support UPnP perfectly. Please test if the router works well with the equipment, if not, we suggest you to disable this function and do the port-forwarding manually.

3.4 Alarm Settings

3.4.1 Alarm service setting

If user need to monitor a fixed area, when there is any motion, it will detect the motion

and trigger the alarm. About the motion detect sensibility, the smaller the value, the more sensitivity.

After triggering the alarm, you can adopt several alarm modes in armed time, example of figure 15.

- Link to the Preset when alarming: need to set preset point of the camera;
- Send alarm info by email (a email include a picture); every alarm trigger a email;
- Send the snap to the FTP server, user can also set the interval time between two pictures.

Device only triggers alarm when it detects any motion in armed time. User can set schedule time to be "all the time" as the armed time. Before you set "Time Schedule", please go to Date and Time settings to set the correct time for the item.

Alarm Service Settings	
Motion Detect Armed	<input checked="" type="checkbox"/>
Motion Detect Sensitivity	5 ▾ The Smaller The Value, The More Sensitivity
Alarm Trigger Event	
Link to the Preset when alarming	3 ▾
Send Mail Notification When Alarm	<input checked="" type="checkbox"/>
Upload Image When Alarm	<input checked="" type="checkbox"/>
Upload Interval (Seconds)	1
Alarm Armed Time	
Time Schedule	<input checked="" type="checkbox"/>
Select All	<input checked="" type="checkbox"/>
Day	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Sun	
Mon	
Tue	
Wed	
Thu	
Fri	
Sat	

Figure.15

3.4.2 Mail Service Setting

When it detects alarming, it can send email to your appointed email box, but you need to set email service parameters correctly. Example of figure 16, click "Submit" to save these parameters, and then you can click "Test" to check if the setting is successful.

Mail Service Settings	
Sender	AP CAM
SMTP Server	smtp.gmail.com @gmail.com
SMTP Port	465
Need Authentication	<input checked="" type="checkbox"/>
SSL	TLS
SMTP User	apcam
SMTP Password	*****
Receiver 1	ipcam@gmail.com
Receiver 2	
Receiver 3	
Receiver 4	
<input type="button" value="Test"/> Please set at first, and then test.	

Figure 16

3.4.3 FTP Service Setting

When alarming, the device will snap local picture and send them to FTP server, but need to set the FTP setting correctly. As figure 17, after the setting is finished, click "Test" to check your settings are successful or not.

FTP Service Settings	
FTP Server	192.168.0.56
FTP Port	21
FTP User	test
FTP Password	*****
Upload Interval (Seconds)	1 Blank or 0 means 'Upload the picture from time to time'
<input type="button" value="Test"/> Please set at first, and then test.	

Figure 17

Notice: When using the FTP function, you need to apply a user with authority that you can write and create submenu and some memory space.

3.4.4 Alarm log

You can inquire when the device performs alarm in alarm log.

Alarm Log
motion alarm 2013-01-30 11:34:54
motion alarm 2013-01-30 11:34:04
motion alarm 2013-01-30 11:32:14
motion alarm 2013-01-30 11:29:00
motion alarm 2013-01-30 11:22:04
motion alarm 2013-01-30 11:18:17
motion alarm 2013-01-30 11:17:30
motion alarm 2013-01-30 10:53:42
motion alarm 2013-01-30 10:52:00
motion alarm 2013-01-30 10:50:53
motion alarm 2013-01-30 10:49:50

Figure 18

3.5 User and device setting

3.5.1 Multi-device Setting

As Figure 19, User can add maximum 9 devices to view video simultaneously. Click "refresh" button to check the device in the LAN. When click a device, setting dialogue will pop up, enter the device info, and click "Add" to add device. After that, click "Setup" button to save device.

Multi-Device Settings	
Device List in LAN	WIFICAM(192.168.0.111)
	<input type="button" value="Refresh"/>
The 1st Device	This Device
The 2nd Device	WIFICAM(192.168.0.144)
The 3rd Device	WIFICAM(192.168.0.111)
The 4th Device	None
The 5th Device	None
The 6th Device	None
The 7th Device	None
The 8th Device	None
The 9th Device	None
Attention: If you want to access the device from internet, be sure the host and port that you set can be accessed from internet.	
<input type="button" value="Setup"/> <input type="button" value="Refresh"/>	

Figure 19

3.5.2 User Settings

Users Settings		
User Authority	User	Password
Administrator	admin	
Operator		
Visitor		
<input type="button" value="Setup"/> <input type="button" value="Refresh"/>		

Figure 20

3.5.3 PTZ settings

PTZ Settings	
Disable Preset	<input type="checkbox"/>
Call the Preset after reboot	Disable ▾
PTZ Speed	Mid ▾
Cruise Turns	Always ▾
<input type="button" value="Setup"/> <input type="button" value="Refresh"/>	

Figure 21

Note: When you set cruise turns all the time, the camera will stop after cruising one hour automatically.

3.5.4 Maintain




Figure 22

Click "Restore factory settings", it will pop up a dialog to ask if restore factory settings or not, the camera will restore factory settings and reboot after you confirmed.

There are two types software in the camera, one is device firmware, another is Web UI, and you can upgrade them respectively.

4 Visiting device by other software

4.1 Other web browser

Except for IE browser, you can visit the camera by Firefox, Safari, Chrome, Opera browser etc., please select "Mode 2 to view".

4.2 Mobile phone software

For more information, please see the user manual for mobile phone in attached CD, or download the latest software and user manual in our website.

5 Product family for L series

5.1 VGA PTZ Camera P100

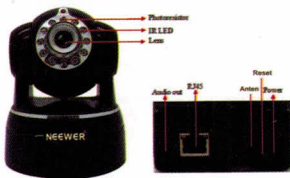


Figure 23

The camera adopts 300K pixels CMOS sensor, 3.6mm lens, built-in PTZ and MIC, 11 pieces IR LED, audio out socket. It accepts 5V power adaptor.

Statement:

1. If you have any questions of the manual, please contact our technical support center.
2. This manual will be updated periodically; the company reserves the right without prior notice.

FAQ:

1. Why my camera cannot be connected by wireless?

Normally, the camera cannot be connected by WiFi mainly due to wrong settings. Please check the following points:

- 1) Check the antenna of the camera whether it is fixed well or not;
- 2) Press the scan button: check whether the camera can find WiFi signal around;
- 3) When you set SSID for camera, please make sure it is the same as SSID of your router;
- 4) Wireless key should be the same with the router's wireless key;
- 5) Whether "disable" mac address filter or not; (It should be disable. If you enable mac address filter, please add the camera's wireless mac address into the allowing list.)
- 6) Whether the camera is too far from the router? (In normal home environment, keeping the distance not beyond 20m is better)

Firstly, please press scan button: check whether the camera can detect the WiFi signal or not. Normally, it needs scanning twice or more. If the WiFi signal can be found, you can choose the SSID of your router in the wireless signal list. The encryption will be filled in the box automatically. You only need to input the wireless key.

Secondly, if the router's WiFi signal can not be scanned, please fill in SSID, encryption and wireless key manually to have a try.

Lastly, if all the wireless settings have no problem, but the camera still cannot connect the WiFi. Please try other encryptions, even without encryption to test. Put the camera near your router to test. If it still cannot connect, please contact our technical service support at support@neewer.com for further help.

2. Why I can't hear sound when the camera has audio function?

- 1) Please check whether your computer can play music or not;
- 2) If you insert an earphone to your computer, please turn on the switch of the earphone;
- 3) Make sure the earphone icon active on the visitor UI;
- 4) Make sure the Network speed not too slow;
- 5) Make sure the sound is not so far from the camera and loud enough for the camera to capture.

3. When I test speaking, there is a loud noise. Is there anything needed to notice?

- 1) Do not put the camera too near to the microphone when you are speaking, or it will cause noise;
- 2) Do not use earphone icon and microphone icon at the same time.

4. Why there is no sound coming from the speaker even when the speaking function is normal?

- 1) Check if the microphone switch used to speak turn on or not;
- 2) Make sure the microphone icon active on visitor UI;
- 3) Make sure the Network speed not too slow.

5. How to download camera software when the attached CD was damaged?


Please visit the website: www.neewer.com to download the software.

6. How to adjust resolution and focus of the camera?

- 1) adjust resolution

You can change the resolution of the camera as below, click ① ② ③ to change it to different resolution respectively: 640x480, 320x160.


TP Camera

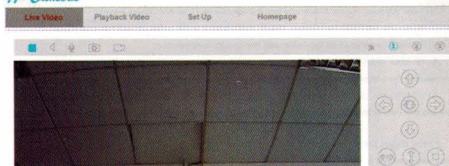

2) Adjust focus

You can twist the lens of the camera until you can view clearly.

7.How to change your user name and password?

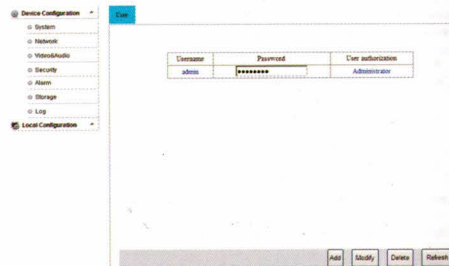

There are 3 levels of user authorization in it.

- ◆ Administrator: has the highest authority. Users can control any system setting. **The factory default password is 123456.**
- ◆ Operator: you can click "Add" button and input a user name and password. Select operator user authorization. You can operate the device, but can't control any system setting.
- ◆ Viewer: you can click "Add" and input a user name and password. Select viewer user authorization. You can only view the video, can't operate the device and can't control any system setting.


- ◆ You can also add several user names on the same level and modify them.

7. How to do One-key WiFi configuration?

Login APP, select "More", select "One Key WiFi Configuration", input Wi-Fi SSID and password, click "Configure".

Notice:

- Before configuration, please plug out power, and then reboot the camera. You can configure the camera after 5 minutes(the blue WiFi indicator is in the status of slow flash), otherwise the camera can't be configured. It needs to plug out power again;
- Put smartphone loudspeaker nearby the camera microphone, then click "configure" (please confirm the camera has built-in microphone, otherwise the configuration will fail) .
- After the configuration is successful, the blue WiFi indicator will be in the status of fast flash. Then connect the router automatically while the blue indicator will be ON all the time. If configuration fails, you can click "Configure" to try again.

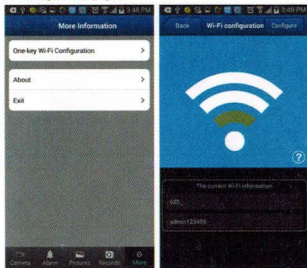

8. How to view the video by mobile phone app?

You can get the app by the following two means:

- 1) Obtain iSmartViewPro form on the attached CD.
- 2) Search and download iSmartViewPro from Google Play Store or APP Store.

And then install the app to the camera, please see the user manual for more details about iSmartViewPro.

9. How to save picture and video of the camera?

You need to access into "Set Up -> Alarm -> Alarm action". You can save the pictures and the videos to your Email, FTP server and SD card as below.

Live Video	Playback Video	Set Up	Homepage
------------	----------------	---------------	----------

Device Configuration ▲

- System
- Network
- Video&Audio
- Security
- Alarm
- Storage
- Log

Local Configuration ▲

- 3D detector
- Motion detection
- Audio detection
- Alarm action**
- Armed time

Alarm action setting

- ☐ Snapshot to Email
- ☐ Snapshot to FTP server
- ☐ Recording to FTP server
- ☐ Snapshot to SD
- ☐ Recording to SD

1. 製品概要

- (1) 本製品は、外出先のパソコンやスマートフォンなどから遠隔監視ができるワイヤレスネットワークカメラです。
- (2) 本製品は、パソコン、iPhone/iPad及びAndroid端末と組み合わせてお使いいただけます。
- (3) 本製品の初期設定時は、有線／無線(WiFi)両対応のルーターが必要です。モバイルWiFiルーターは、有線対応であっても動作保証を致しかねます。また、ネット接続に関するサポートは行ないませんので、悪しからずご了承ください。
- (4) 本製品はレンズ固定タイプです。PTZ(首振り・ズーム)機能は搭載しておりません。

2. カメラ設置・接続



- (1) お買い上げのカメラが室内用か屋外用かを確認し、任意の場所に設置してください。屋外用カメラは、できるだけ雨水のかからない場所に設置してください。カメラ設置は、各種設定完了後でも構いません。
- (2) LANケーブルでカメラ本体をパソコンと同一のネットワークに有線接続してください。
- (3) カメラに付属のACアダプターを接続し、カメラ本体から出ているケーブル先端のリセットボタンを15秒程度押します。その後、3分経過してから以下の作業を行なってください。

3. アプリのインストール及び設定



(1) パソコンの場合

- 1) 付属のCD-ROMを開き、LAN search toolという名前のフォルダー(下図)を開いてください。
- 2) お使いのOSのフォルダー(WindowsまたはMacOS)を開くと、それぞれインストーラーがあります。以下、Windowsを例にとって説明します。
- 3) SearchPro_v*.*.exeをダブルクリックすると、アプリをインストールできます。インストール後、デスクトップ上にSearchProのショートカットアイコンが生成されます。

注：パソコンの設定によっては、拡張子(.exe)が表示されないことがあります。

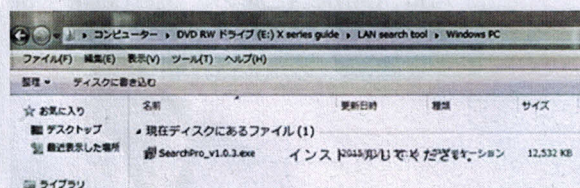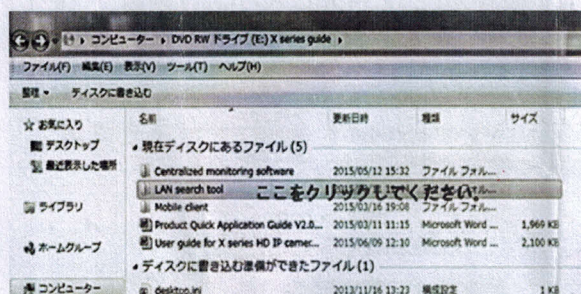

- 4) デスクトップ上のSearchProのショートカットアイコンをダブルクリックすると、以下のウィンドウが表示されます。「検索する」をクリックしてネットワーク上のカメラを検索してください。その後、ウィンドウ上に装置名(カメラID)、IPアドレスなどが表示されます。

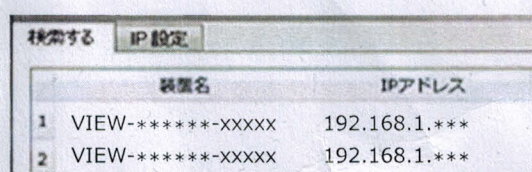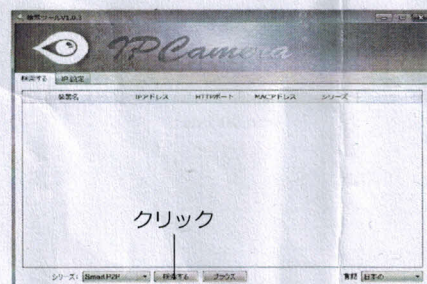


- 5) 装置名(カメラID)とIPアドレスが表示されたら、その部分をダブルクリックしてください。その後、ログイン画面が表示されます。ユーザーIDをadmin、パスワードを123456としてログインしてください。


検索する IP設定

ダブルクリック

	装置名	IPアドレス
1	VIEW-*****-XXXXX	192.168.1.***
2	VIEW-*****-XXXXX	192.168.1.***

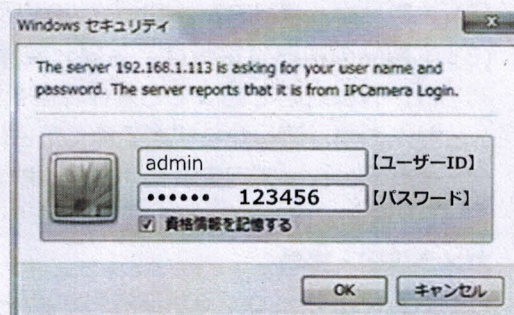

- 6) ログイン後、プラグイン(コントロールアプリ)のダウンロード画面が表示されます。カメラの無線接続や詳細設定をされる場合は、ダウンロード・インストールしてください。

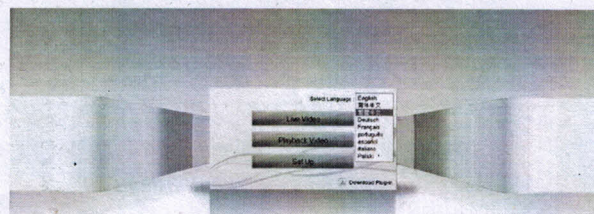


プラグインダウンロード画面

- 7) アプリ上でカメラ映像が確認できれば、基本設定完了です。

(2) スマートフォン・タブレットの場合

- 1) スマートフォンまたはタブレットを、カメラと同一のネットワークにWiFi接続してください。
- 2) AppStoreまたはGooglePlayでiSmartViewProと検索してアプリをダウンロード・インストールしてください。インストール後、iSmartViewProのアイコン(下図)が生成されます。
- 3) iSmartViewProを起動し、Add Camera→Scan QR Codeと進んでください。
- 4) カメラ本体側面のQRコード(下図はサンプル)をスキャンしてください。その後、Search Camera→Add Cameraと進み、Usernameをadmin、Passwordを123456と入力し、最後にDoneをタップしてください。

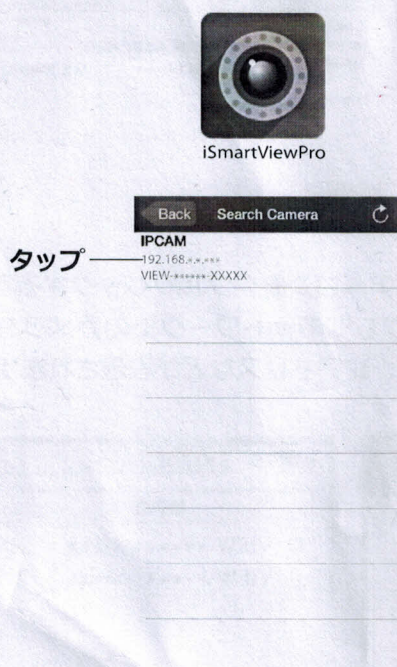

本体側面のQRコード




- 5) アプリ上でカメラ映像が確認できれば、基本設定完了です。

4. WiFi設定

カメラをWiFi接続する場合は、パソコン、スマートフォンともアプリで設定します。**WiFi設定は、有線LAN接続状態で、上述の基本設定完了後にカメラを再起動して行なってください。**パソコンの場合は、プラグイン(コントロールアプリ)がインストールされている必要があります。【上記3.-(1)-6)参照】




(1) パソコンでの設定

コントロールアプリを起動、Setup→WiFiと進み、以下の要領で設定してください。

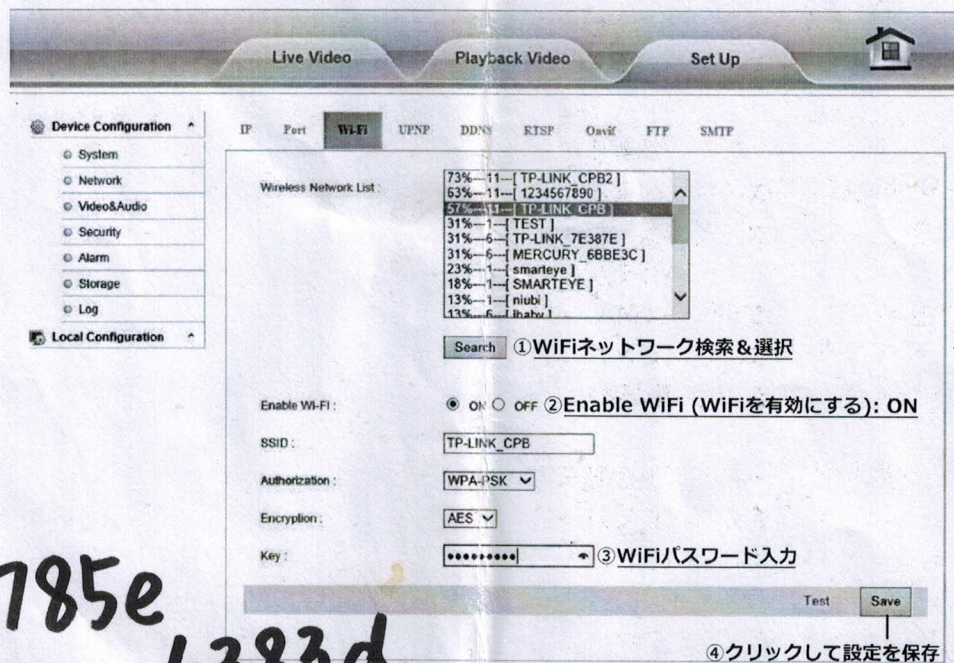

(2) スマートフォンでの設定

- 1) スマートフォンをカメラと同一のネットワークにWiFi接続し、iSmartViewProを起動してください。
- 2) 接続済のカメラをタップし、Edit Camera→Advanced Settingsと進んでください。
- 3) WiFi Settingをタップし、お使いになるWiFiネットワークを選択し、>をタップしてパスワードを入力、最後にDoneをタップしてください。

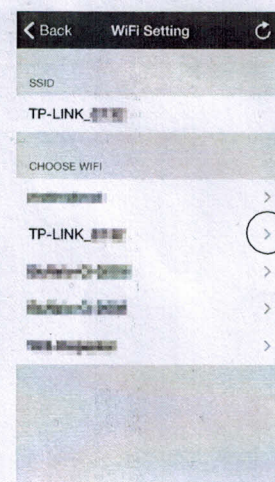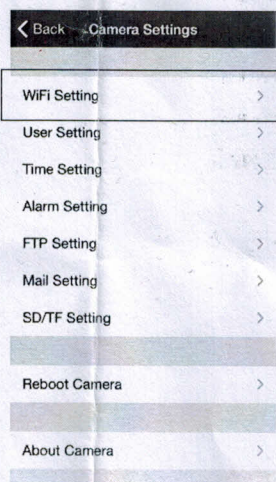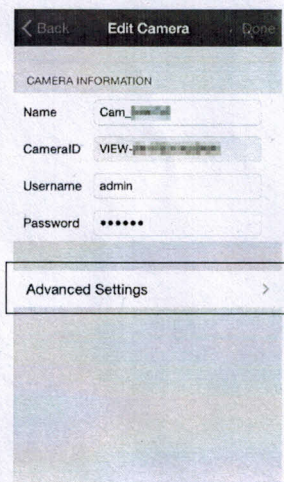

5. カメラリセット


カメラをネットに接続できない、あるいは不安定な場合は、**LANケーブル及び電源ケーブルを接続した状態で、リセットボタンを15秒押す**とリセットできます。この場合はすべての設定がクリアされますので、最初から再設定する必要があります。**再設定はリセット後、3分経過してから行なってください。**

NEEWER[®]

P100

HD Cloud IP Camera


Mega Pixels PTZ IP Camera

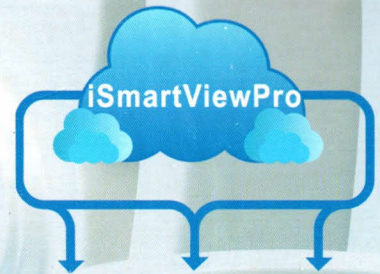

One Key
WiFi Set up



Multiview on APPs
Windows PC & Mac



HD Cloud IP Co



One Key WiFi Co
via Sonic Rec



HD Cloud IP Camera



HD Quality
720P Resolution



Pan & Tilt
Move camera up, down, left & right



WiFi
One key WiFi configuration via mobile APPs



Easy
No networking required in set-up



Micro/SD Card
Save video & HD images to Micro/SD Card (max.: 64GB)



Day & Night
Know what's happening 24/7



Multiview function
Multiview on APPs and Windows PC & Mac



Motion Detection
Be notified or record when there's activity



Audio
High Quality Two-Way Audio




ONVIF
Support ONVIF



MADE IN CHINA

HD Cloud IP Camera

Mega Pixels PTZ IP Camera

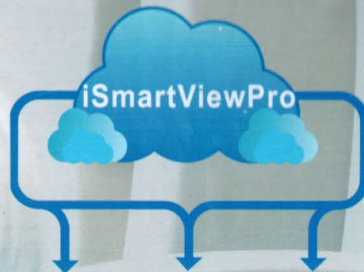

One Key
WiFi Set up



Multiview on APPs
Windows PC & Mac



Available on the
App Store